

Product Name: CITY WLA COLUMN BRACKET

General information

- This luminaire must be installed in accordance with the latest edition of the IET Wiring Regulations and local Building Regulation by a qualified competent person.
- The mains power supply must be turned off before inspection, installation or removal of the luminaire, ensuring that the supply is locked off to prevent inadvertently switching the supply on.
- It is the installer's responsibility to ensure that the installation is suitable for the total load of the luminaire(s). The supply cable fuses/circuit breakers must be correctly rated for the electrical load and taking into account for any transient inrush currents that may occur.
- It is the installer's responsibility to ensure that the environmental operating and storage conditions are complied with and that any fire risks are considered.
- Do not perform insulation strength or insulation resistance tests on the installation with the luminaire(s) connected, this can damage the luminaires and give erroneous readings.
- Do not loop-in supply cables at the luminaire supply terminals unless there is provision for 2-way connection at the terminals.
- The light source contained in this luminaire must only be replaced by TamLite Lighting or an appointed service agent.
- Emergency lighting luminaires must be installed and maintained in accordance with the emergency lighting standard BS 5266-1.
- To ensure that the product warranty remains valid, the luminaire must be installed and maintained in accordance with these installation instructions and the product must not be modified in any way.

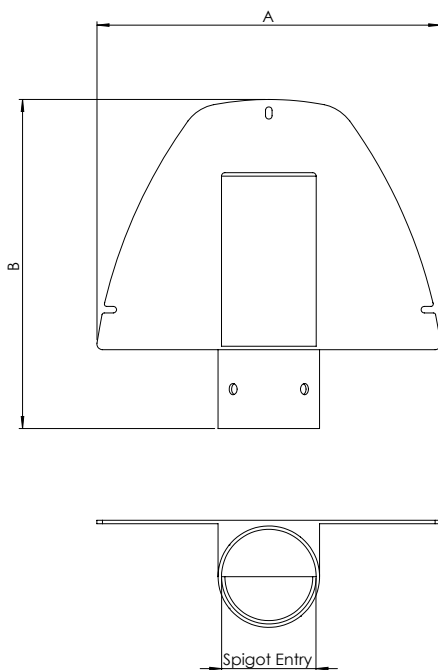


Luminaires marked with this symbol must not be covered with thermally insulating material.



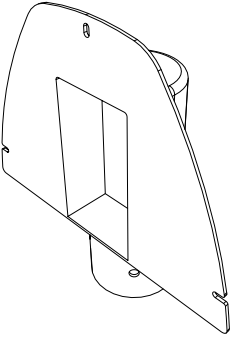
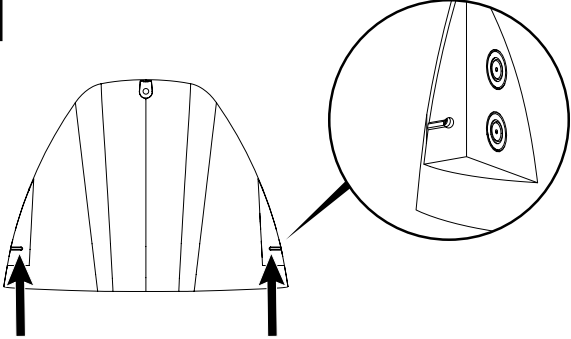
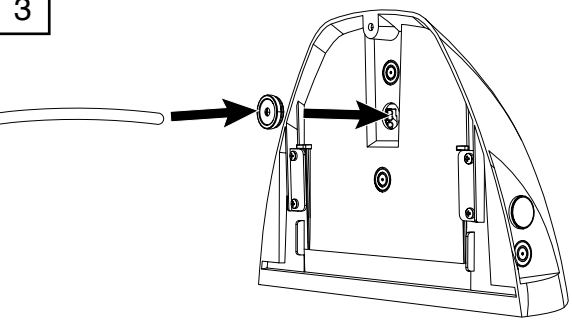
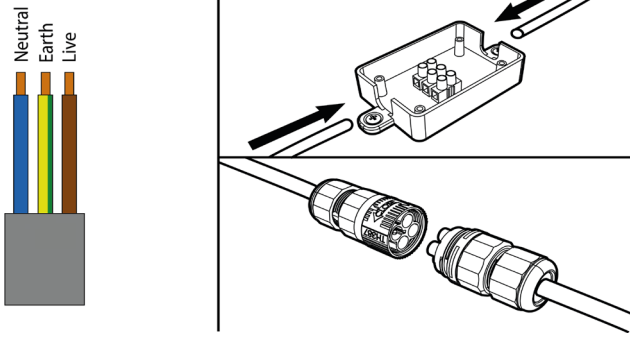
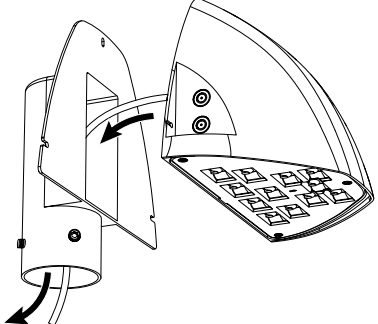
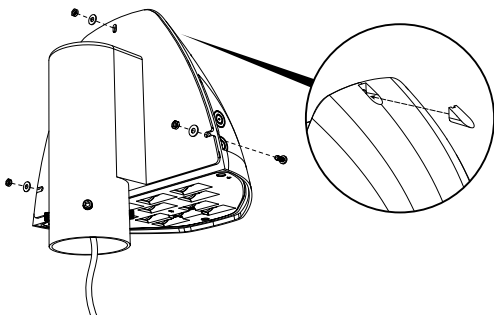
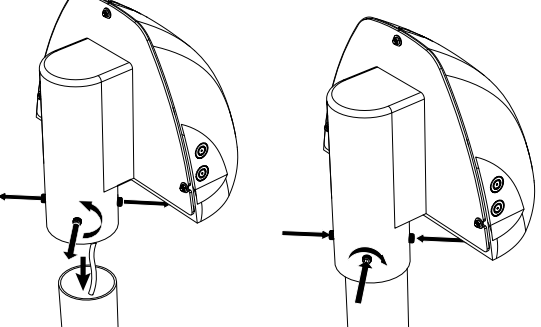
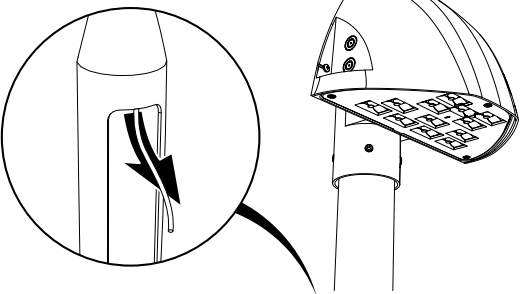
This symbol on covers over light sources indicates dangerous live parts do not operate the luminaire with this cover removed.

Dimensions



	A (mm)	B (mm)	Spigot Entry (mm)
CWLABKT/60	305	292	66
CWLABKT/76	305	292	84
CWLABKT/89	305	292	94
CWLABKT/114	305	292	121

To be used with CWLA only

<p>1</p>  <p>Remove product from its packaging.</p>	<p>2</p>  <p>Drill M5 holes on each side of the luminaire body.</p>
<p>3</p>  <p>Pre-wire the luminaire as per the luminaire instructions</p>	<p>4</p>  <p>If required, extend the pre-fitted power cable with a suitably rated connector.</p>
<p>5</p>  <p>Feed the luminaire supply cable through the bracket.</p>	<p>6</p>  <p>Secure the luminaire onto the bracket and attach the top screw cover.</p>
<p>7</p>  <p>Feed the supply cable through column and secure the luminaire with grub screws.</p>	<p>8</p>  <p>Connect to mains supply as appropriate.</p>