

Product Name: TX

General information

- This luminaire must be installed in accordance with the latest edition of the IET Wiring Regulations and local Building Regulation by a qualified competent person.
- The mains power supply must be turned off before inspection, installation or removal of the luminaire, ensuring that the supply is locked off to prevent inadvertently switching the supply on.
- It is the installer's responsibility to ensure that the installation is suitable for the total load of the luminaire(s). The supply cable fuses/circuit breakers must be correctly rated for the electrical load and taking into account for any transient inrush currents that may occur.
- It is the installer's responsibility to ensure that the environmental operating and storage conditions are complied with and that any fire risks are considered.
- Do not perform insulation strength or insulation resistance tests on the installation with the luminaire(s) connected, this can damage the luminaires and give erroneous readings.
- Do not loop-in supply cables at the luminaire supply terminals unless there is provision for 2-way connection at the terminals.
- The light source contained in this luminaire must only be replaced by TamLite Lighting or an appointed service agent.
- Emergency lighting luminaires must be installed and maintained in accordance with the emergency lighting standard BS 5266-1.
- To ensure that the product warranty remains valid, the luminaire must be installed and maintained in accordance with these installation instructions and the product must not be modified in any way.



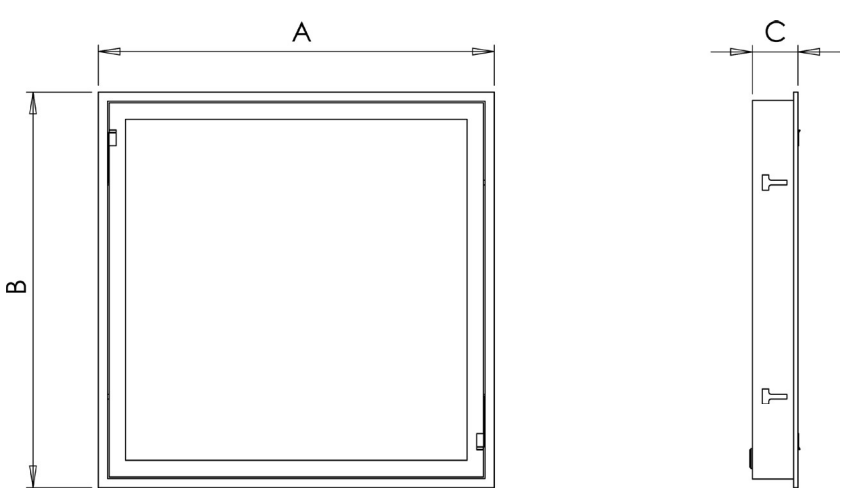
Luminaires marked with this symbol must not be covered with thermally insulating material.



This symbol on covers over light sources indicates dangerous live parts do not operate the luminaire with this cover removed.

Dimensions

	A (mm)	B (mm)	C (mm)	Cut-Out
TXR66290 / TXR66330 / TXR66390 / TXR66430	595	595	76	595x595
TXR123390 / TXR123430	1195	295	76	1195x295
TXR126780 / TXR126860	1195	595	76	1195x595



INSTALLATION & OPERATING INSTRUCTIONS



Product Name: TX - LAY IN INSTALLATION

<p>1</p> <p>Remove the product from its packaging.</p>	<p>2</p> <p>Release the Diffuser panel from the luminaire by opening the release arms.</p>
<p>3</p> <p>Open the diffuser frame to access the internal components.</p>	<p>4</p> <p>Bring incoming supply cable to the intended luminaire position.</p>
<p>5</p> <p>Bring supply cable through cable entry gland.</p>	<p>6</p> <p>Terminations shown for standard and emergency variants.</p>
<p>7</p> <p>Terminations shown for DALI dimmable and DALI emergency variants.</p>	<p>8</p> <p>Reattach diffuser.</p>

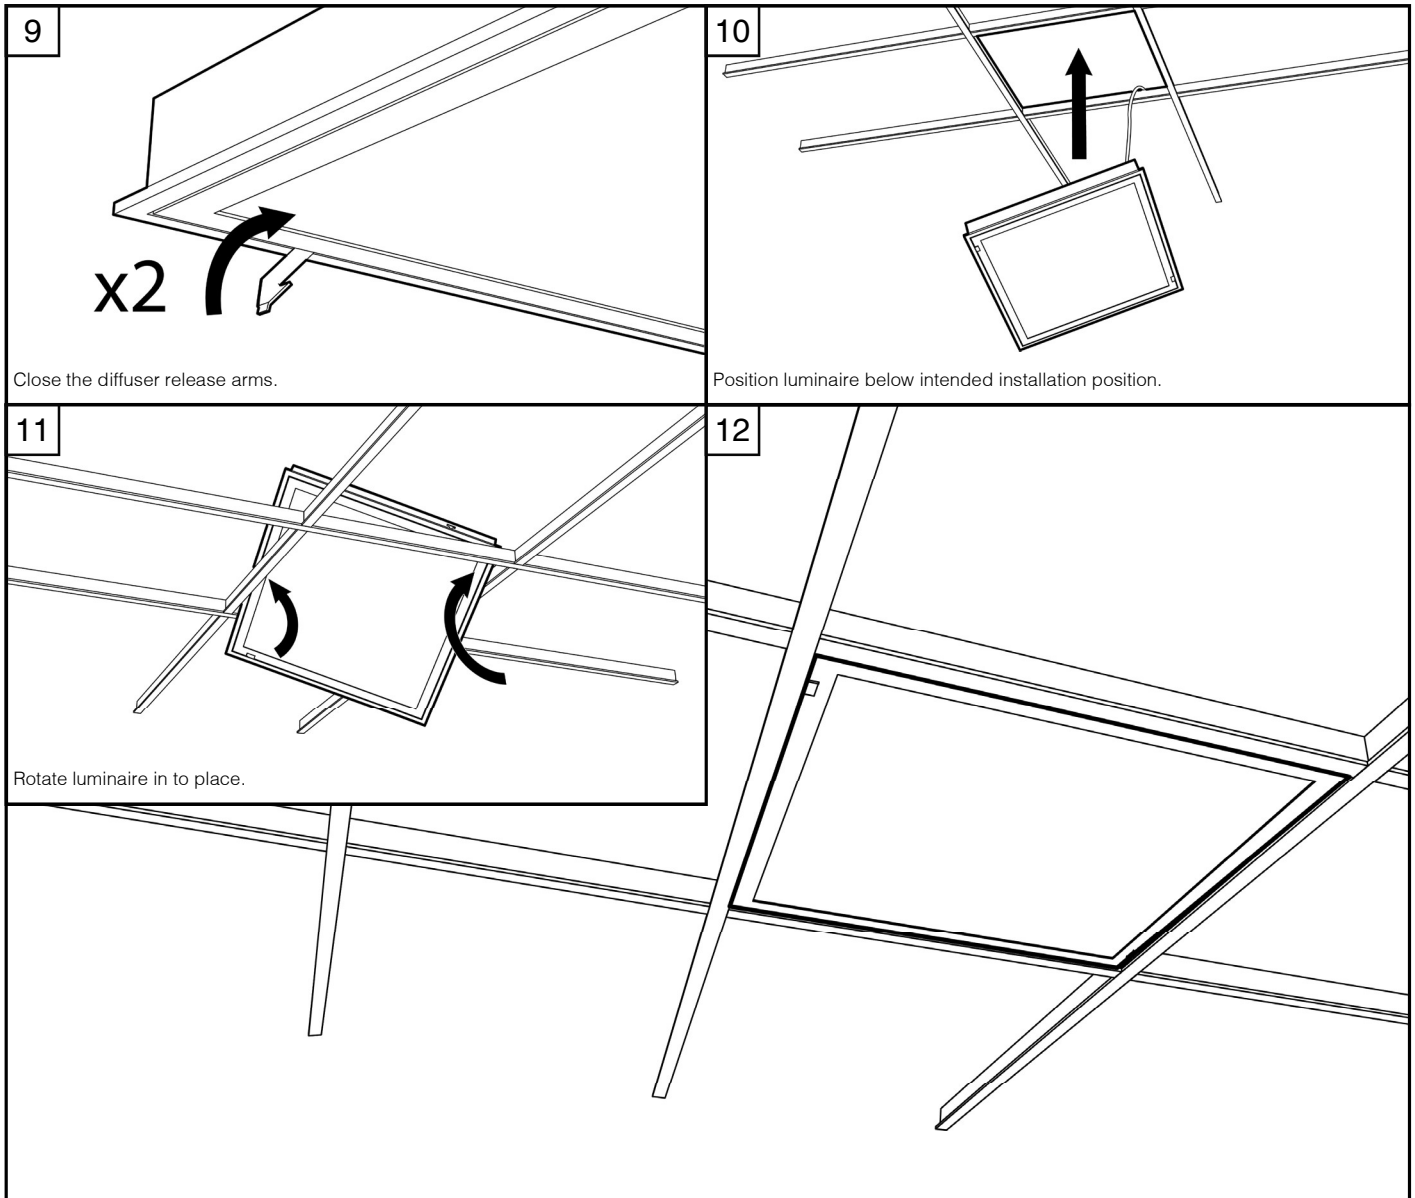
Page 2 of 5

Tamlite Technical
Stafford Park 12,
Telford, Shropshire,
TF3 3BJ

+44(0)1952 292441
technical@tamlite.co.uk
Document No: V1



Product Name: TX - LAY IN INSTALLATION











Page 3 of 5

Tamlite Technical
Stafford Park 12,
Telford, Shropshire,
TF3 3BJ

+44(0)1952 292441
technical@tamlite.co.uk
Document No: V1




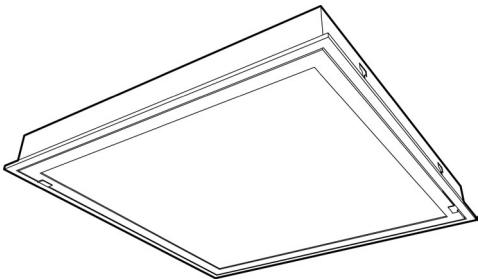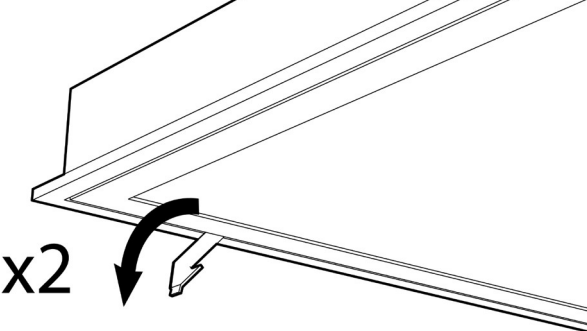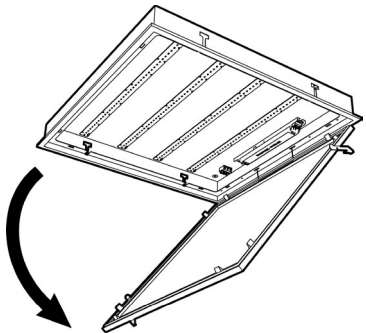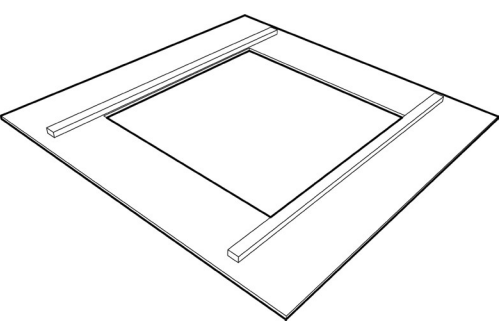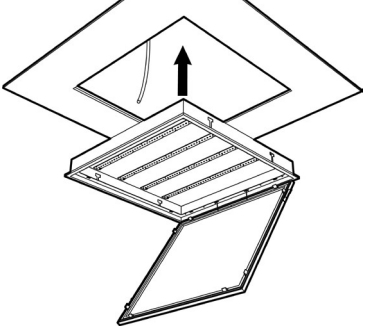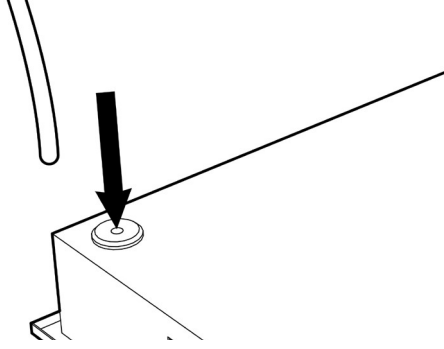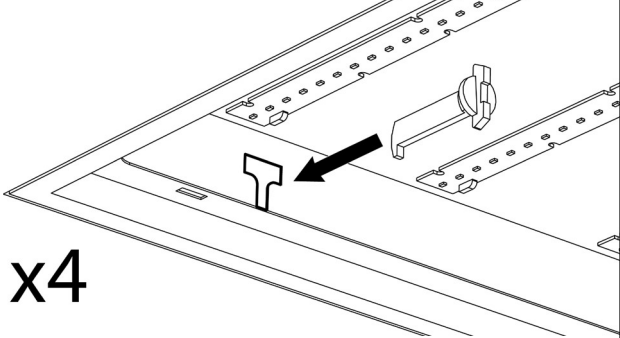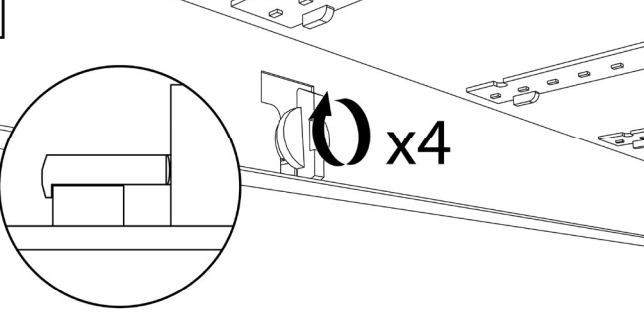Product Name: TX - PLASTERBOARD INSTALLATION

<p>1</p>  <p>Remove the product from its packaging.</p>	<p>2</p>  <p>Release the Diffuser panel from the luminaire by opening the release arms.</p>
<p>3</p>  <p>Open the diffuser frame to access the internal components.</p>	<p>4</p>  <p>Install appropriate support battens to the rear of the installation point.</p>
<p>5</p>  <p>Position the luminaire below the installation point.</p>	<p>6</p>  <p>Bring supply cable through cable entry gland and align the panel into position.</p>
<p>7</p>  <p>Install lumafix brackets in all four points on the luminaire body.</p>	<p>8</p>  <p>Adjust the panel height and rotate the buckle to lock the brackets in place.</p>


Product Name: TX - PLASTERBOARD INSTALLATION

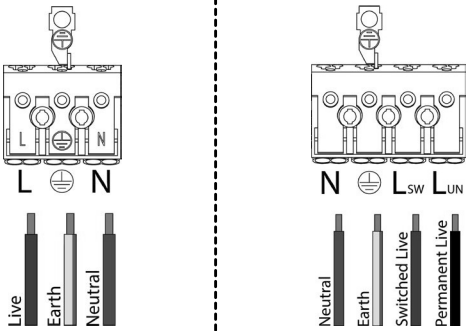9




Terminations shown for standard and emergency variants.

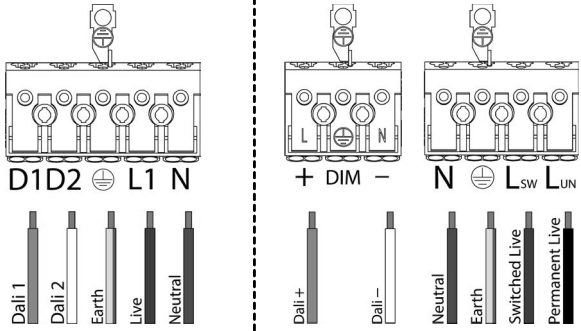10




Terminations shown for DALI dimmable and DALI emergency variants.

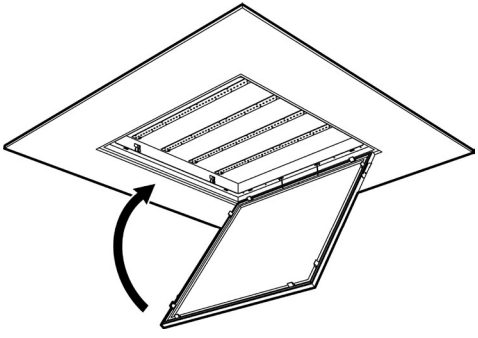11



Reattach diffuser.

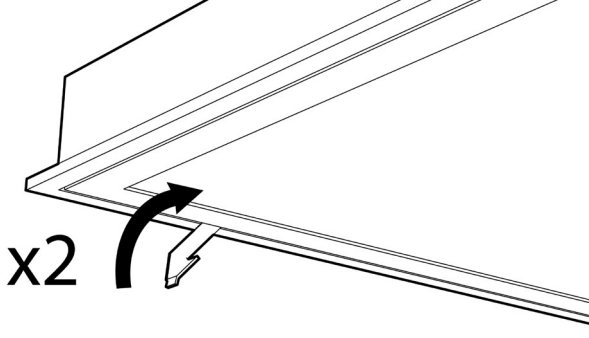12



Close the diffuser release arms.

13

